

"woodmaster"

by

modernfold

DOORS

THE FIRST AND FINEST IN FOLDING DOORS

modernfold's "woodmaster" doors

Now MODERNFOLD doors are available in *wood*! New "Woodmaster" folding doors open and close entirely within the doorway, and save all the space that conventional, swinging doors waste. In room divider sizes, as illustrated, they extend to make two separate and private rooms—or fold back to provide a single, unobstructed area.

MODERNFOLD's "Woodmaster" doors are ideal for use in living rooms, dens, family rooms, recreation rooms, on closets, or anywhere that the convenience and space saving advantages of folding doors in handsome wood are desired.

They open and close at a touch, rolling on nylon trolleys in an overhead track—no dirt-catching floor track is required. Full 6" wide panels have solid, warp-free particle board cores, with choice veneer surfaces. Tough, opaque, vinyl hinges join the panels—flex thousands of times without breaking or cracking, by actual test.

"Woodmaster" doors in the veneers shown below are factory finished to preserve their natural beauty. Ask your MODERNFOLD distributor about special veneers, unfinished doors, and "paint-grade" doors.



New Castle Products, Inc. • New Castle, Indiana • Manufacturers of Folding Doors, Air Doors, Shower Enclosures, Vinyl-Coated Fabrics, and Peabody School Furniture • In Canada: New Castle Products, Ltd., Montreal 23

WALNUT

MAHOGANY


OAK

BIRCH

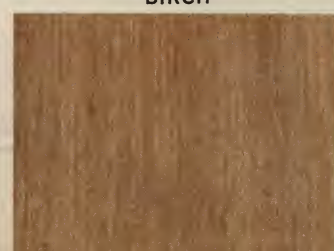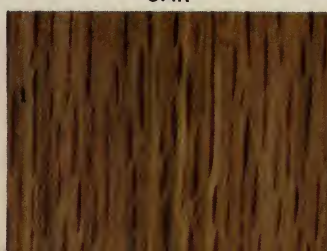


CONSTRUCTION FEATURES


modernfold's "woodmaster" doors

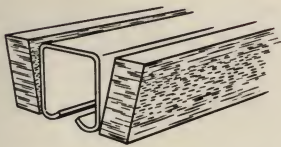


● Heavy gauge steel head track completely supports door—no floor track required. Adjustable friction track spring holds door securely to jamb when closed. Track moulding strips (optional) in matching wood may be installed to completely cover sides of track.

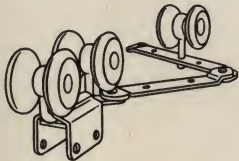


● Nylon trolleys—four at the top of the lead post, two at every other full panel—carry the door effortlessly in the track. Trolley pins are fastened to steel hinges that are screwed to top of panels. The steel hinges bear the lateral weight of the door when it is opened.

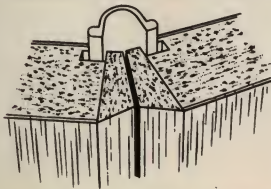

● Lead posts and panels are $\frac{3}{16}$ " thick—panels are a full 6" wide. These rugged and handsomely proportioned dimensions are possible only with MODERNFOLD's warp-free, particle board cores. Veneers are laminated to the cores with thermosetting, waterproof, synthetic resin glue. Panels are joined with locked-in, opaque vinyl hinges that flex thousands of times without cracking.

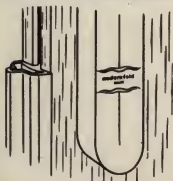

● Extruded vinyl lead post gasket acts as cushion and seal against door jamb—matches vinyl hinges—won't mar. Pulls are furnished with satin finish brass plating—sealed to prevent tarnishing.

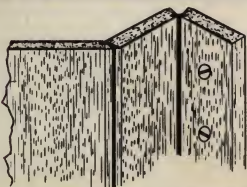

● Jamb post panel is fastened to door jamb with brass plated screws—holes are pre-drilled and countersunk for screws at factory.


modernfold's "woodmaster" doors are simple to install

The typical MODERNFOLD installation takes only 30 minutes from beginning to end—and no special tools or skills are required. The three basic steps are shown.

MODERNFOLD doors may be installed in plastered or dry-wall openings as well as those cased in wood. Floor to ceiling MODERNFOLDS on closets do away with the return wall construction and headers required for ordinary doors, and every installation saves all the *space* that swinging doors waste.



1 The drilled track is cut to length, and pilot holes are drilled in the header to receive the mounting screws.

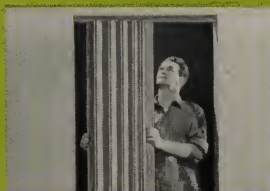

2 Door is threaded on the track, and the entire assembly is fastened in position with track screws.



3 Pre-drilled jamb post is fastened with screws provided, and installation is completed!

THE CINCINNATI SASH & DOOR CO.

4500 Reading Rd.
Cincinnati 29, Ohio

modernfold
DOORS

THE FIRST AND FINEST IN FOLDING DOORS


modernfold doors "spacemaster" line




Beige




Off-white

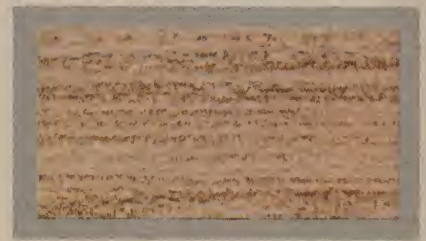

Golden White

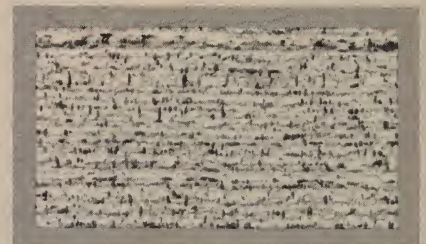

Tweed

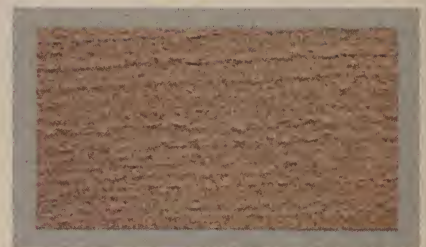

Smoke Grey

MODERNFOLD's new, low-priced "Spacemaster" Line of doors are handsome, quality products designed specifically for residential installations.


They are available in all the popular doorway sizes (see list on reverse side) and may be installed either singly, or in pairs without alteration.

The durable, vinyl coated fabric used on "Spacemaster" Line doors is available in the five attractive colors illustrated. They're fade resistant, and retain their original luster indefinitely with an occasional washing—however, they may be painted or even slipcovered at any time if desired. The fabric is held to the all-steel frame of the door by a unique system of fasteners and spring-loaded clips that keeps it taut and neat-looking at all times.



THE
first and finest
IN
FOLDING DOORS

modernfold doors cut labor and materials costs

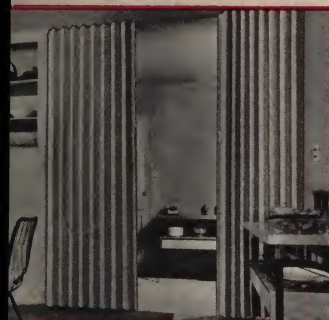

MODERNFOLD'S "Space-master" doors can be installed as pairs in wide doorways, or to make room dividers in spaces up to 8' wide. The procedure is the same as for single installations—no alterations are required in the doors when they are installed as a pair.




"Rolling post" installations—where the door may be opened from either end—can be made on all "Spacemaster" models in the 4'0" wide sizes. This application is ideally suited to closets and wardrobes, especially on floor to ceiling openings.



The "Spacemaster" Line is available in attractive, durable, fade-resistant colors—however, they may be painted with any good quality rubber base or acrylic base paint if desired. They can also be slipcovered with any fabric or coated wallpaper!

dimensions:

All sizes are 7" wide when stacked, 3 $\frac{3}{4}$ " wide when extended to full opening width. In odd-width doorways, use next larger size door—dimension of door when extended will be slightly over 3 $\frac{3}{4}$ " wide.

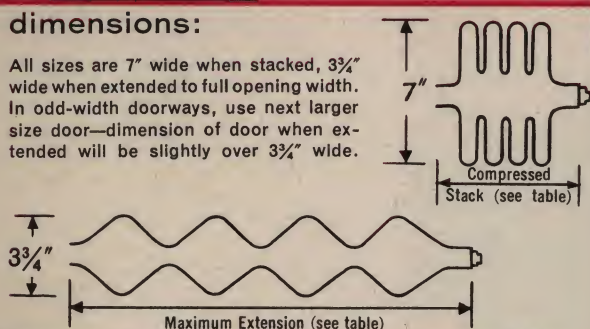

sizes:	For Opening Width To:	*For Opening Height:	Compressed Stack Dimension:
	2'0"	6'6"	4 $\frac{1}{4}$ "
	2'0"	6'8 $\frac{1}{2}$ "	4 $\frac{1}{4}$ "
	2'6"	6'6"	4 $\frac{1}{4}$ "
	2'6"	6'8 $\frac{1}{2}$ "	4 $\frac{1}{4}$ "
	3'0"	6'6"	5 $\frac{1}{4}$ "
	3'0"	6'8 $\frac{1}{2}$ "	5 $\frac{1}{4}$ "
	4'0"	6'6"	6 $\frac{1}{2}$ "
	4'0"	6'8 $\frac{1}{2}$ "	6 $\frac{1}{2}$ "
	4'0"	8'0"	6 $\frac{1}{2}$ "

*NOTE: Heights listed are actual dimensions of opening from floor to header from which door will hang. "Spacemaster" doors in 6'6" and 6'8 $\frac{1}{2}$ " sizes provide $\frac{1}{4}$ " clearance from bottom of door to floor; 1" clearance on 8'0" doors. The fabric at the bottom of all doors may be turned up an additional $\frac{1}{2}$ " if required.

Builder, home-buyer, and homeowner alike cut costs when they use MODERNFOLD doors. Installation costs are substantially reduced because there are no "extras" to buy . . . everything required to complete the installation is packed with the door. At the builder level, time spent on the installation is also minimized, resulting in further savings.

Only three simple steps are required to install the "Spacemaster" model: 1) the drilled track is cut to length and the header is drilled to receive the mounting screws; 2) the door is threaded on the track, and the entire unit is fastened in position; and 3) jamb clips—when one post of the door is to be fastened in the doorway—are screwed in position, and the jamb post is snapped in place. MODERNFOLD doors eliminate the time and expense of mortising and drilling for knobs and hinges, of sanding, and of painting or staining and varnishing, since installation completes the job!

MODERNFOLD QUALITY FEATURES

All steel framework . . . vertical steel rods are welded to exclusive "X" type hinges at both top and bottom for maximum rigidity and strength.


Double-fold construction provides two identical sides for graceful beauty, smooth operation. Interior air space is excellent insulation where heating or air conditioning factors must be considered.

Shallow, steel track is completely covered when door is closed, virtually invisible when door is open . . . no unsightly cornices are required.

Big, nylon slides—two on the lead post, and single intermediate units—float the door effortlessly in the overhead track . . . no dirt-catching floor tracks are needed with MODERNFOLD'S rugged "Spacemaster" doors.

Vinyl coated fabrics are available in lovely colors. They're durable, fade resistant, easy to wash . . . stay bright and new-looking indefinitely.

"Privacy" latches that can be operated from one side of the door only are available, extra. Installation may be made on either side of the door, and is quite simple since holes are pre-drilled in the door frame before the fabric is applied.

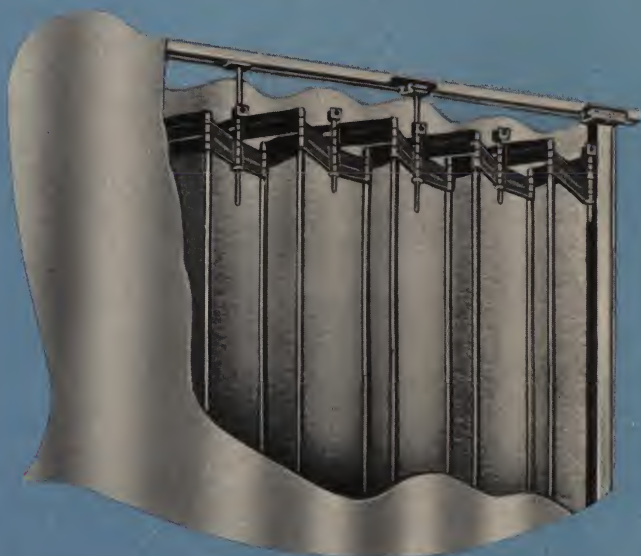

THE CINCINNATI SASH & DOOR CO.

4500 Reading Rd.
Cincinnati 29, Ohio

MODERNFOLD DOORS "Spacemaster" Line

MODERNFOLD's new, low-priced "Spacemaster" Line of doors are handsome, quality products designed specifically for residential installations.

They are available in all the popular doorway sizes (see list below) and may be installed either singly, or in pairs without alteration. All heights in the 4'0" wide group have the added feature of "rolling posts"—in other words, one post (edge) of the door may be fastened conventionally in the doorway, or both posts may be left free so that the door can be opened from either end. The latter application is ideally suited to closet or wardrobe installations.

The durable, vinyl coated fabric used on "Spacemaster" Line doors is available in attractive colors. They're fade resistant, and retain their original luster indefinitely with an occasional washing—however, they may be painted or even slipcovered at any time if desired. The fabric is held to the all-steel frame of the door by a unique system of fasteners and spring-loaded clips that keeps it taut and neat-looking at all times.

Read about the quality construction features and easy installation requirements of "Spacemaster" Line doors on the reverse side.



MODERNFOLD's "Spacemaster" doors can be installed as pairs in wide doorways, or to make room dividers in spaces up to 8' wide. The procedure is the same as for single installations—no alterations are required in the doors when they are installed as a pair.


"Rolling post" installations—where the door may be opened from either end—can be made on all "Spacemaster" models in the 4'0" wide sizes. This application is ideally suited to closets and wardrobes, especially on floor to ceiling openings.

The "Spacemaster" Line is available in attractive, durable, fade-resistant colors—however, they may be painted with any good quality rubber base or acrylic base paint if desired. They can also be slipcovered with any fabric or coated wallpaper!


modernfold
DOORS

dimensions:

All sizes are 7" wide when stacked, 3 3/4" wide when extended to full opening width. In odd-width doorways, use next larger size door—dimension of door when extended will be slightly over 3 3/4" wide.

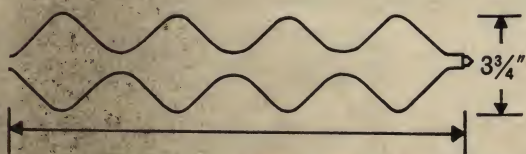

EXTENDED TO MAXIMUM
OPENING SIZE
(See Chart At Right)

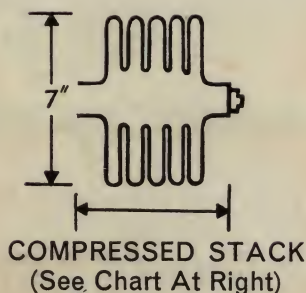

sizes:

For Opening Width To:	*For Opening Height:	Compressed Stack Dimension:
2'0"	6'6"	4 1/4"
2'0"	6'8 1/2"	4 1/4"
2'6"	6'6"	4 3/4"
2'6"	6'8 1/2"	4 3/4"
3'0"	6'6"	5 1/4"
3'0"	6'8 1/2"	5 1/4"
4'0"	6'6"	6 1/2"
4'0"	6'8 1/2"	6 1/2"
4'0"	8'0"	6 1/2"

* NOTE: Heights listed are actual dimensions of opening from floor to header from which door will hang. "Spacemaster" doors in 6'6" and 6'8 1/2" sizes provide 3/4" clearance from bottom of door to floor; 1" clearance on 8'0" doors. The fabric at the bottom of all doors may be turned up an additional 1/2" if required.

Section 5

Page 9

Price Sheet



MODERNFOLD QUALITY FEATURES

All steel framework . . . vertical steel rods are *welded* to exclusive "X" type hinges at *both* top and bottom for maximum rigidity and strength.

Double-fold construction provides two *identical* sides for graceful beauty, smooth operation. Interior air space is excellent insulation where heating or air conditioning factors must be considered.

Shallow, steel track is completely covered when door is closed, virtually invisible when door is open . . . no unsightly cornices are required.

Big, nylon slides—two on the lead post, and single intermediate units—float the door effortlessly in the overhead track . . . no dirt-catching floor tracks are needed with MODERNFOLD's rugged "Spacemaster" doors.

Vinyl coated fabrics are available in lovely colors. They're durable, fade resistant, easy to wash . . . stay bright and new-looking indefinitely.

"Privacy" latches that can be operated from one side of the door only are available, extra. Installation may be made on either side of the door, and is quite simple since holes are pre-drilled in the door frame before the fabric is applied.

Modernfold doors cut labor and materials costs

Builder, home-buyer, and homeowner alike cut costs when they use MODERNFOLD doors. Installation costs are substantially reduced because there are no "extras" to buy...everything required to complete the installation is packed with the door. At the builder level, time spent on the installation is also minimized, resulting in further savings.


Only three simple steps are required to install the "Spacemaster" model: 1) the drilled track is cut to length and the header is drilled to receive the mounting screws; 2) the door is threaded on the track, and the entire unit is fastened in position; and 3) jamb clips—when one post of the door is to be fastened in the doorway—are screwed in position, and the jamb post is snapped in place. MODERNFOLD doors eliminate the time and expense of mortising and drilling for knobs and hinges, of sanding, and of painting or staining and varnishing, since installation completes the job!

For new construction, planning ahead can further reduce costs, since MODERNFOLD doors can be installed in either plastered or dry-wall openings—framing and trim can be completely eliminated. Floor to ceiling doors on closet openings do away with partial wall construction and headers required for ordinary doors, and of course, every installation saves all the space that swinging doors waste.


Remodeling is simplified, too—corner cabinets, under-eaves storage space, extra closets, etc., can often be "built" by merely installing a MODERNFOLD door. Replacing a swinging door with MODERNFOLD frequently provides enough extra space to add cabinets in a kitchen, bookcases in a living room or den, etc.—the possibilities are practically endless.



The installation of a MODERNFOLD door in this kitchen permits construction of extra cabinets in space formerly wasted by a swinging door.

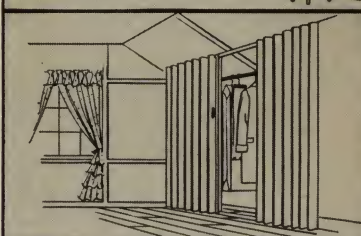

Extra storage space was "built" in this attic room by simply installing a pair of MODERNFOLD doors—any little-used corner could be converted in the same way.

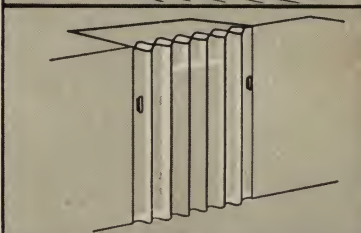

MODERNFOLD doors eliminate the building of partial walls required to frame down to swinging door size . . . and eliminate a great deal of cutting and fitting in laying the closet floor.



By planning ahead to use MODERNFOLD doors, you can eliminate all the trim and framing around doorways, since they can be installed directly to plastered or dry-wall openings.

THE CINCINNATI SASH & DOOR CO.

4500 Reading Road
Cincinnati 29, Ohio
Phone JEFFerson 1-1910

